



# ***Pocket Pump***<sup>®</sup>

***Personal Low Flow Sampler***

*Quick Guide »*

SKC Inc., 863 Valley View Road, Eighty Four, PA 15330

*Keypad is located beneath the sliding cover*

## **Star button \***

- To scroll through displays or, with other buttons, to set pump operations

## **Up and down arrow buttons ▲ ▼**

- To increase or decrease flow or pressure during setup and to set up pump operations

## **Button sequence**

- To enter commands correctly during pump setup, they must be in sequence

## **Underlined sequence \* ▼ ▲ \***

- To be pressed within 10 seconds of previous command

## **Bracketed sequence [▲ ▼]**

- To be pressed simultaneously

## **Security code \* ▲ ▼ \***

- To prevent unauthorized changes to the pump's sampling program

# Rocket Pump<sup>®</sup> Programming Sequences »

- **To activate pump (e.g. to change pump from SLEEP to HOLD),**  
Press any button.
- **To change pump from HOLD to RUN or RUN to HOLD,**  
Press [▲▼]
- **To clear old data,**  
With pump running, press [▲▼] then \*▲▼\* then \*\*
- **To select operating mode (switch from constant flow to constant pressure),**  
With pump running, press [▲▼] then \*▲▼\* then \*▼▲\*
- **To change the flow rate in Constant Flow mode**  
With pump in hold, press [▲▼] then \*▲▼\* (SET flashes) Press ▲ or ▼ to change flow rate. When done, press \*\*
- **To calibrate the flow in Constant Flow mode,**  
With pump in hold, press [▲▼] then \*▲▼\* then \* (ADJ flashes) Press ▲ or ▼ to adjust flow until pump and calibrator are in agreement. When done, press \*

# **Rocket Pump**<sup>®</sup> *Programming Sequences »*

---

- **To change the pressure in Constant Pressure mode,**  
With pump in hold, press [▲▼] then \*▲▼\* (SET and P flashes) Press ▲ or ▼ to increase or decrease  
When done, press \*
- **To change data display from standard to enhanced,**  
With pump running, press [▲▼] then \*▲▼\* then  
\*▲▲\*
- **To change data display from enhanced to standard,**  
With pump running, press [▲▼] then \*▲▼\* then  
\*▼▼\*
- **To change temperature scale from F to C or C to F,**  
With pump running, press [▲▼] then \*▲▼\* then  
[\*▼]
- **To change back pressure units from mm to ins or ins to mm,**  
With pump running, press [▲▼] then \*▲▼\* then  
[▲\*]