

Leland Legacy Quick Guide

Terms »

Star button *

- Scrolls through run time data and Setup options

Up and down arrow buttons ▲▼

- Toggle between display choices and increase or decrease sampling parameters in Setup

Button sequence

▼ * = press buttons individually

[▲▼] = press simultaneously

▲▼ = security code, always press in sequence

Security code *▲▼*

- Prevents unauthorized changes to the pump's sampling program

Programming Sequences »

• To activate pump (e.g., to change pump from Sleep to Hold):

Press any button.

• To change pump from Hold to Run or Run to Hold:

Press [▲▼].

• To reset accumulated data:

Press [▲▼], then *▲▼*. Press * until *CLr* displays then press [▲▼]; press * until *End* displays then press [▲▼].

• To set pump flow rate:

Press [▲▼], then *▲▼*. Flow rate and SET flash. Press ▲ or ▼ to change flow rate. Press * until *End* appears then press [▲▼] to save setting and place pump in Hold.

• To calibrate flow rate with standard calibrator:

Press [▲▼], then *▲▼*. Flow rate and SET flash. Press ▲ or ▼ to change flow rate. Press * once. *ADJ* displays. Press ▲ or ▼ until desired flow rate is indicated on calibrator. When finished, press * until *End* displays then press [▲▼] to save new setting and place pump in *Hold*. For *CalChek Calibration*, see operating instructions.

• To change temperature scale from F to C or C to F:

Press [▲▼], then *▲▼*. Press * until temperature displays. Press ▲ or ▼ to switch units; press * until *End* displays then press [▲▼] to save new setting.

• To change atmospheric pressure scale (mm, mb, In):

Press [▲▼], then *▲▼*. Press * until pressure displays then press ▲ or ▼ to switch units; press * until *End* displays then press [▲▼] to save new setting.

• To change time scale (12 Hr/24 Hr/Dela):

Press [▲▼], then *▲▼*. Press * until 12 Hr, 24 Hr, or *Dela* displays then press ▲ or ▼ to switch units; press * until *End* displays then press [▲▼] to save new setting. To set delayed start (*Dela*), see operating instructions.

• To change clock:

Press [▲▼], then *▲▼*. Press * until clock displays then press ▲ or ▼ to change flashing hour; press * to move to minutes and ▲ or ▼ to change setting. Press * until *End* displays then press [▲▼] to save new setting.

• To change the sampling time function:

Press [▲▼], then *▲▼*. Press * until *ST L/min* displays then press ▲ to change flashing digit; press * until *End* displays then press [▲▼] to save new setting. To delete, follow above steps and press ▼ until 0 appears. Exit Setup.

Note: When in Setup, choosing Esc instead of End will exit Setup without saving new settings.