

AirChek XR5000 Quick Guide

Keypad Basics

- * (star key) Scrolls through parameters in user setup functions.
- ▲▼ (up/down arrow keys) Increase or decrease flow rate, timed run, and run delay time.

Key Sequences

- ▼ * Press keys individually.
- [▲▼] Press keys simultaneously. Toggles between Run and Hold and exits user setup functions.
- *▲▼* Security code to access user setup functions. With pump in a non-running state (no flashing blue LED), press keys in sequence.

Operation

- Pump On **Press and hold** *.
- Pump Off Press and hold * through countdown. Auto-off will shut down pump after 5 minutes without activity.
- Mode Change Press [▲▼] to toggle between Run and Hold.
- Keypad Lock Press ▼ 5 times **quickly** to activate. Press ▼ 5 times **quickly** to deactivate.
- Run/Hold With pump in a non-running state (no flashing blue LED), press [▲▼] to run pump. Press [▲▼] to Hold pump when completed.

Accessing User Setup Functions

- **Entering User Setup Functions**
With pump in a non-running state (no flashing blue LED), press *▲▼*.
- **Exiting User Setup Functions**
Press [▲▼]. Pump is ready. Press [▲▼] to run the pump or to start a run delay.

User Setup Functions

To navigate while in user setup functions, press * until the desired function displays.

Function	When LCD Displays	User Action	Result
Clear Accumulated Run Time <i>Function only available when accumulated run time exists.</i>	CLr and flashing Hold	Press [▲▼].	Clears run and run time and exits functions. Press [▲▼] to run pump.
Adjust Flow Rate*	"---" and flashing ADJ Flow	Press ▲ or ▼. Press [▲▼] to exit functions.	Flow increases/decreases. Press [▲▼] to run pump.
Set Timed Run†	Flashing Set Timed Run and min	Press ▲ or ▼. Press [▲▼] to exit functions.	Minutes increase/decrease. Press [▲▼] to run pump.
Set Run Delay†	Flashing Set Run Delay and min	Press ▲ or ▼. Press [▲▼] to exit functions.	Minutes increase/decrease. Press [▲▼] to start run delay. Blue LED flashes. Pump starts after delay elapses.

* Changing flow rate in user setup functions **will not** clear accumulated run time.

† Changing timed run and/or run delay settings in user setup functions **will** clear accumulated run time.