



SKC

New!

IFV Pro Sampler


Designed for ACGIH TLVs with IFV Designation

- **True inhalable fraction and vapor sampling simultaneously**
 - Collects aerosol phase on a 25-mm filter and vapor in an 8 x 110-mm sorbent tube.
 - Applications and media are shown in Selection Guide (*see right*).
- **IOM-style inlet sized for 1 L/min flow for true inhalable sampling**
- **Collects vapor phase on a variety of sorbents following published methods**
- **Recommended 1 L/min flow rate allows for effective collection of both contaminant phases**
- **Meets European Standard 13936**

SKC introduces the IFV Pro Sampler for collecting mixed-phase contaminants such as pesticides, polyaromatic hydrocarbons (PAHs), inorganic acids, and explosives. Sampling mixed-phase contaminants is challenging because the vapor and aerosol distribution is constantly changing. IFV Pro features an IOM-style inlet for true inhalable sampling, and collects vapor phase on a variety of method-specific sorbents.

ACGIH IFV Designation

ACGIH has assigned a TLV with Inhalable Fraction and Vapor (IFV) designation to over 50 compounds that exert sufficient vapor pressure such that the contaminant may be present in both particle and vapor phases, with each phase contributing a significant portion of the dose. IFV Pro allows for efficient sampling of compounds with this designation (*see right*) or compounds found in mixed phases due to work activities or processes.

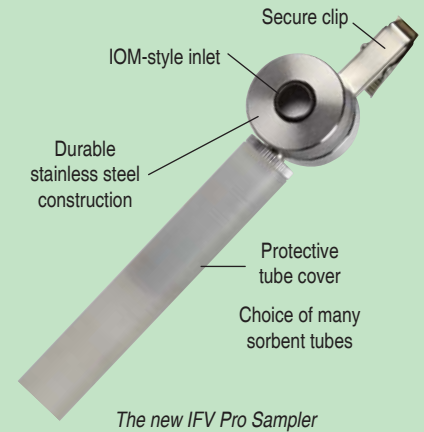


IFV Pro Filter and Sorbent Tube Selection Guide

Compound	Recommended Filter	Sorbent Tube
Acrylamide	225-702	226-10-04
Alachlor	225-702	226-30-06
Aldrin	225-702	226-30-06
Azinphos-methyl	225-702	226-30-06
Butylated hydroxytoluene	225-702	226-211
Carbaryl	225-702	226-30-06
Carbofuran	225-702	226-30-06
Chlorpyrifos	225-702	226-30-06
Clopidol	225-702	226-30-06
Coumaphos	225-702	226-30-06
Cresol, all isomers	225-702	226-211
Demeton	225-702	226-30-06
Demeton S-methyl	225-702	226-30-06
Diazinon	225-702	226-30-06
Dibutyl phosphate	225-702	226-30-06
Dichlorvos	225-702	226-30-06
Dicrotophos	225-702	226-30-06
Dieldrin	225-702	226-30-06
Diesel fuel as total hydrocarbons	225-702	226-09
Diethanolamine	225-702	226-214
Dioxathion	225-702	226-30-06
Disulfoton	225-702	226-30-06
Endosulfan	225-702	226-30-06
2-Ethylhexanoic acid	225-702	226-10-04
Fenamiphos	225-702	226-30-06
Fensulfthion	225-702	226-30-06
Fenthion	225-702	226-30-06
Fonofos	225-702	226-30-06
Glyoxal	225-9036	226-119-7
Malathion	225-702	226-30-06
Maleic anhydride	225-9028	226-213
Methomyl	225-702	226-30-06
Methyl demeton	225-702	226-30-06
Methyl parathion	225-702	226-30-06
Mevinphos	225-702	226-30-06
Monochloroacetic acid	225-702	226-10-04
Monocrotophos	225-702	226-30-06
Naled	225-702	226-30-06
o-Phthalodinitrile	225-702	226-83
Parathion	225-702	226-30-06
Pentachlorophenol	225-702	226-211
Phorate	225-702	226-30-06
Propoxur	225-702	226-30-06
Ronnel	225-702	226-30-06
Sulfotepp	225-702	226-30-06
Sulprofos	225-702	226-30-06
Temephos	225-702	226-30-06
Terbufos	225-702	226-30-06
1,1,2,2-Tetrabromoethane	225-702	226-10-04
Tetraethylpyrophosphate (TEPP)	225-702	226-106A
Thiram	225-702	226-30-06
Toluene-2,4-diisocyanate	225-9035	—
Toluene-2,6-diisocyanate	225-9035	—
Xylidene isomers	225-702	226-10-04



SKC IFV Pro Sampler

Designed for ACGIH TLVs with IFV Designation

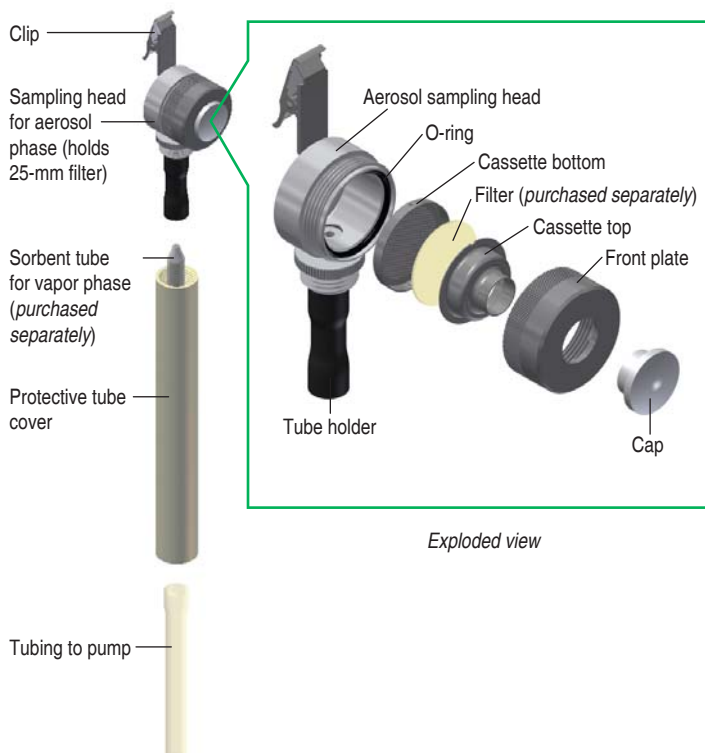

Exploded view

Sampling Mixed-phase Contaminants Using IFV Pro

- Aerosol phase** — Place cassette loaded with 25-mm filter in sampling head.
- Vapor phase** — Insert opened sorbent tube into tube holder on sampling head.
- Simultaneous sampling** — Attach tubing to sorbent tube, put protective tube cover in place, attach tubing to sample pump, and sample!

SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to <http://www.skcinc.com/warranty>.



Performance Profile

Flow Rate: 1 L/min

50% Cut-point: 100 µm at 1 L/min inhalable fraction

Material:

Sampling Head Stainless steel front plate and filter cassette with 10.6-mm dia. inlet*; aluminum clip, housing, and outlet

Tube Holder Black rubber

Protective Tube Cover Plastic

Maximum Operating Temperature:

392 F (200 C) suitable for autoclaving and solvent washing

Filters: 25-mm glass fiber or quartz filter; or coated filter. Dependent upon compound of interest. See *Selection Guide on reverse side*.

Sorbent Tubes: 8 x 110-mm size. Dependent upon compound of interest. See *Selection Guide on reverse side*.

Tubing: ¼-inch ID

Weight: 2.4 oz (68 gm)

Dimensions: 8.5 x 1.2 in (21.6 x 3.17 cm)

* Designed to meet the inhalable convention based on the scaling down technique described in the Final Report on research carried out under NIOSH-CDC Grant No. RO1-OH 03687-03, "Development of New Personal Aerosol Samplers," Vincent, J.H., et al., 2003.

Ordering Information

Description	Cat. No.
IFV Pro Sampler includes sampling head (aerosol sampler body, cassette, and front plate), protective tube cover, cassette cap, 10 extra tube holders (rubber sleeves), and cassette transport container, <i>requires 25-mm filter and sorbent tube</i>	225-49
IFV Pro Sampler Kit includes sampler as described above, calibration adapter, and case, <i>requires 25-mm filter and sorbent tube</i>	225-49K
Filter Cassette , stainless steel, with cap and transport container, <i>for 25-mm filter</i>	225-4903
Tube Holders (Rubber Sleeves) , pack of 25, change after each sample	P3022A
Accessory	
Calibration Adapter	225-361